



Intelligent Tablet Packing System

CAP(EX) Models





**Smart
Cassette**

CAP(EX) Series for Small/Medium Sized Pharmacies

- Extendable from 52 to Max. 92 as needed.
- Minimum foot print.
- Convenient with a 30-cell MDU for newly added or uniquely shaped tablets.
- Original FSP allows not only variety of generic tablets but also half-cut tablets.
- Smart Cassette (with address display) can conveniently be placed anywhere.

Model	CAP-92FS	CAP-72FS	CAP-52FS
Number of Cassette	92 EA	72 EA	52 EA
Cassette Type	L : 20 / S : 52 / M : 20		
Packing Capacity	Max. 60 Packs (Unit dose) / Avg. 50 Packs (Multi dose)		
FSP	3 UNIT		
MDU	30 Cell		
SIZE	Refer to the next page		



Extendable from 52 to Max. 92 as needed

- User can start with a small-size model first, and as needs grow, it can be extended by adding 20-canister block(A Block), from 52 to a maximum of 92.




Detailed Size Specifications

- Starting with the base model EX52 Type (A+B+C), an additional A Block unit can be stacked on top of the machine to accommodate customer needs.

MODEL	Width * Length * Height (mm)
CAP(EX)-52	670 * 490 * 1677 (A+C+B)
CAP(EX)-72	670 * 490 * 1854 (A+A+C+B)
CAP(EX)-92	670 * 490 * 2030 (A+A+A+C+B)

A BLOCK

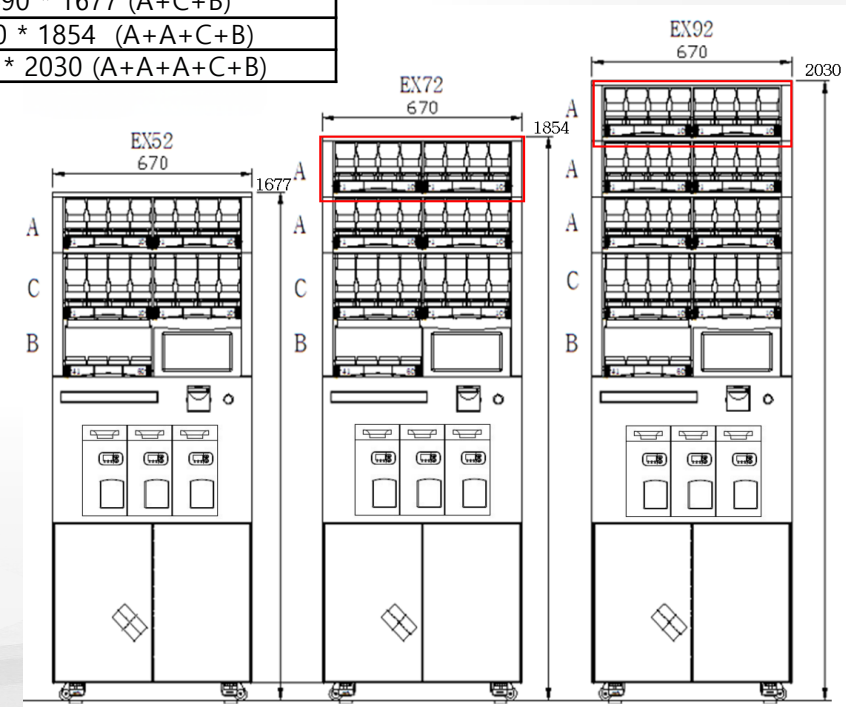

PATENTED

Advanced Technology, T Slide System

- Patent-registered technology with individual slider for easy access.
- 16, 24, or 36 types of medicines on the front side for high-frequency access.
- You can easily supplement and clean tablets from the front without opening the sliders.
- Fast, easy cleaning and management are facilitated by an airtight medicine passage, effectively addressing existing issues.





PATENTED

FSP (Free Shape Packing System)

- World's Only Patented Technology – Automatic return and re-dispensation when double-dropped.
- Universal use for a variety of generic tablets.
- Cost Effective, No need of Additional Cassette for a New Medicine.
- User Friendly, Wide Choice of Generics Regardless of the Shapes such as half-cut and special or unique shaped tablets.
- Modular Design, Easy Parts Replacement and Maintenance Work.
- Easy supply of medicines while avoiding direct hand contact, ensuring hygienic dispensing.





MDU (Manual Dispensing Unit)

- MDU is an auxiliary dispensing unit that allows for the dispensing of medicines, including half-tablets and uniquely shaped tablets.
- It is specifically designed for medicines that are not dispensed often or for a small dose of prescription.
- MDU is available with 30 cell for this type.





Printing by Thermal Printer

- The content can include patient name, time and method of taking medicines, medicine name, Max. 99 parameters including 1D or 2D barcode.
- Various printing formats are available, allowing you to design your own print layout and print the contents accordingly.
- You can ensure the medicine has been dispensed correctly and that the dosage is accurate with printed information.
- Enhanced printing quality by utilizing a tilting head system.
- A minimal absorber and unique riveting method are applied for easy and convenient replacement of the printer ribbon.



Thank You.